



M8001

RECORD/PLAYBACK INTERFACE MODULE

USERS GUIDE

COMCODE: 700 198 815

PEC CODE: 8807-064



Description

The M8001 interface connects an 8400 type voice terminal to a recording device. This allows recording and playback of conversations through the voice terminal. Any recorded media that plays back through the M8001 is audible to both parties. The M8001 does not allow recording from a speakerphone or auxiliary device.

Installation

Figures 1 and 2 show the location of the jacks and switches on the M8001. Figure 3 shows the keyhole locations for wall mounting.



Figure 1

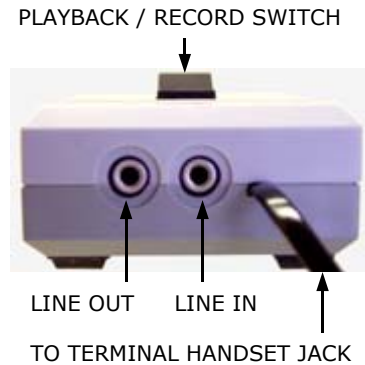


Figure 2

Voice terminal connections

- 1 Disconnect the handset from the voice terminal.
- 2 Plug the pigtail connector from the M8001 (marked "SET") into the handset jack on the voice terminal.
- 3 Connect the handset to the jack on the M8001 marked "HANDSET".

Recorder connections

- 1 Connect one of the cables supplied to the "LINE IN" jack on the M8001. Connect the other end of this cable to the line out jack from the recorder.

(This may be marked line out, external speaker, or earphone on the recorder.)

- 2 Connect the second cable to the “LINE OUT” jack on the M8001. Connect the other end of this cable to the input jack on the recorder. (This may be marked as line in, external mic, or aux input.)

Option switch

Two dip switches on the M8001 control the audible beep tone and the output level used for recording. The switch is located to the right of the handset jack on the M8001, as shown in figure 1.

Output level

Switch #1 (left side) sets the record signal level. The telephone level is approximately 10dB higher (stronger) than the mic level.

Mic level – UP (open)

Telephone level – DOWN (closed)

Beep tone

Switch #2 (right side) sets the beep tone on or off.

Beep tone off – UP (open)

Beep tone on – DOWN (closed)

Mounting

The M8001 is made for desktop or wall mount use. 2 screws are required for wall mounting. The screws are positioned 4.13 inches apart and fit in 2 keyholes on the bottom of the M8001. (See figure 3.)



Figure 3

Operation

Recording

Set the mode switch located on top of the M8001 to "RECORD". Place or receive a call on your voice terminal. The conversation will be recorded. If you have set the beep tone option on, a short tone will be heard every 15 seconds.

Playback

Set the mode switch located on top of the M8001 to "PLAYBACK". Set your recording device to playback. The recorded media is audible to both parties.

General

The beep tone is muted during playback, however, if the tone was used during recording, the recorded beep will play back.

The microphone (in the handset) is muted when the mode switch is in the "PLAYBACK" position. You must switch the M8001 to "RECORD" during normal conversations, even if you are not recording.

The distant end mic is never muted.

Specifications

GENERAL

Dimensions (overall)4.93"L x 3.63"W x 1.59"W

ACCESSORIES INCLUDED

2ea. MA1 cable - 3ft length. 1/8" mini phone plug to 1/8" mini phone plug. For use with portable cassette recorders or similar devices with 1/8" jack.



Starcom Incorporated

3303 North Dixie Highway
Boca Raton, FL. 33431

phone: (561) 392-7001 ★ fax: (561) 392-7003 ★ email: sales@starcom-inc.com ★ internet: www.starcom-inc.com